


SQUIER AFFINITY STRAT WIRING SCHEME



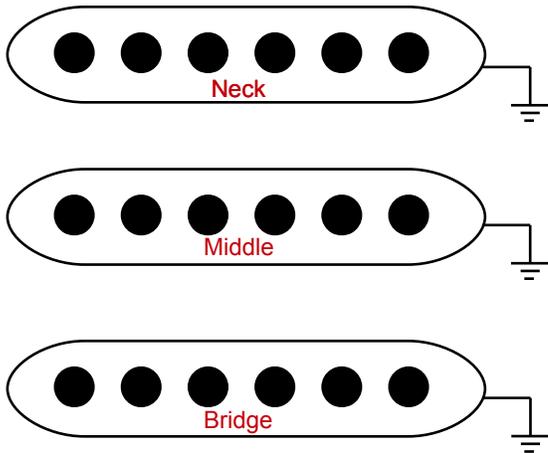


5-way switch




5-Way switch configuration:

- Position 1** = Bridge
- Position 2** = Bridge + Middle
- Position 3** = Middle
- Position 4** = Neck + Middle
- Position 5** = Neck

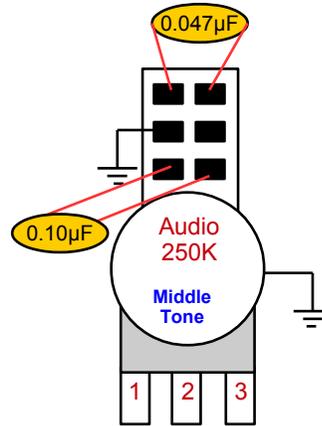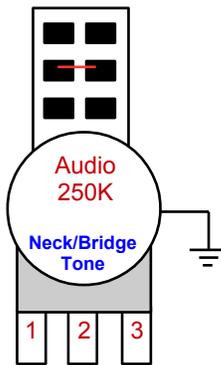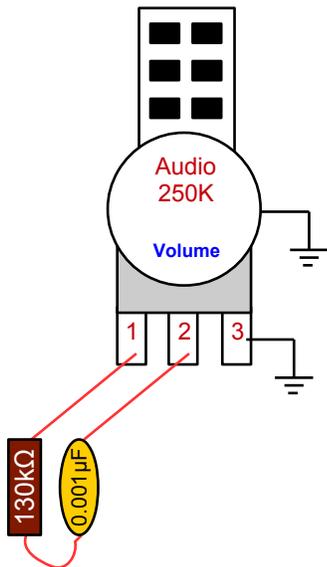

“Push/Pull” intentions:

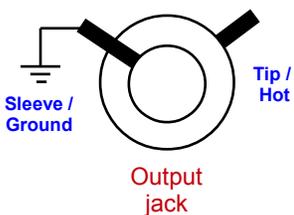

- Volume “down”** = Regular configuration.
- Volume “up”** = Turns-on Bridge pickup.
- Neck/Bridge tone “down”** = Tone controls Neck and Bridge together.
- Neck/Bridge tone “up”** = Tone controls Bridge, only.
- Middle tone “down”** = 0.047 µF cap.
- Middle tone “up”** = 0.10 µF cap.